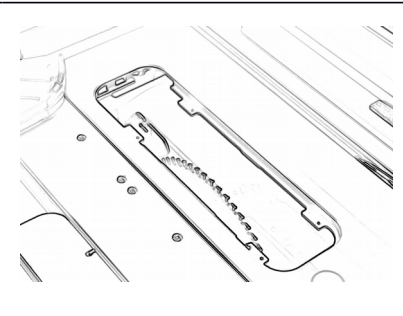
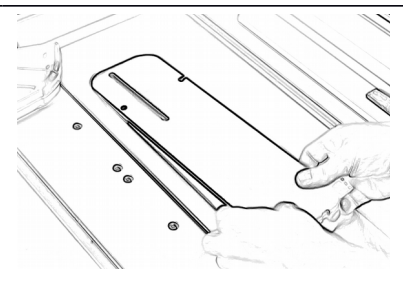
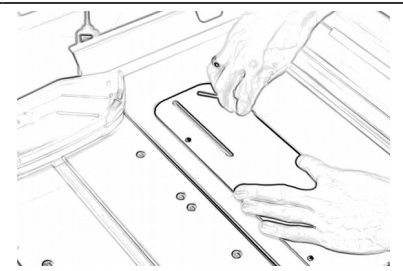


### Assembly instructions: Zero-Clearance Insert Bosch GTS 10 XC

Congratulations for purchasing the Zero-Clearance Einsatzen for the Bosch GTS10 XC (US Modell 4100). Only few steps are missing before you can use your insert. All steps are also shown in the product video accessible through [www.lambdasign.de](http://www.lambdasign.de).

1	<p>Remove the protection cap and lower the saw blade completely. Please remove now the original insert.</p>	
2	<p>Mount then the Zero-Clearance insert into the saw table. The insert has a very tight fit by intention. You may adjust the form with a file. Please verify that the notch for the riving knife is over the riving knife.</p>	
3	<p>Using the hex wrench with the screws, you can adjust height of the insert. Please make sure that the insert is in one plane with the saw table. Place the fence over the insert to lock the insert vertically. The distance notch to fence should be close, (one finger). Prepare an additional bar of scrapwood to press down the insert while cutting.</p>	
4	<p>Turn on the saw and lift the blade slowly to the highest position. While lifting press down the insert with the bar. Turn off the saw and mount the protection cap. Your insert is now ready to be used.</p>	